




**A:** EXTEND TRIPOD LEGS.  
**B:** POSITION GRIP BALL HEAD.

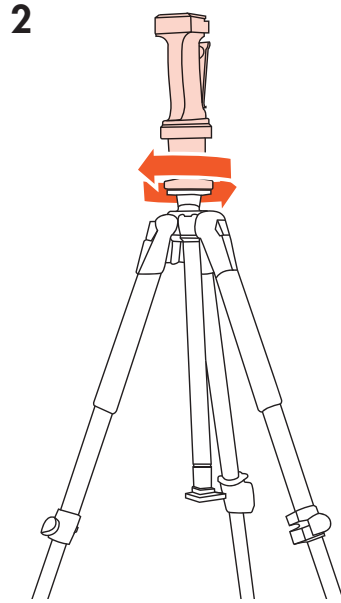


ROTATE GRIP BALL HEAD  
UNTIL SECURE ON TRIPOD.

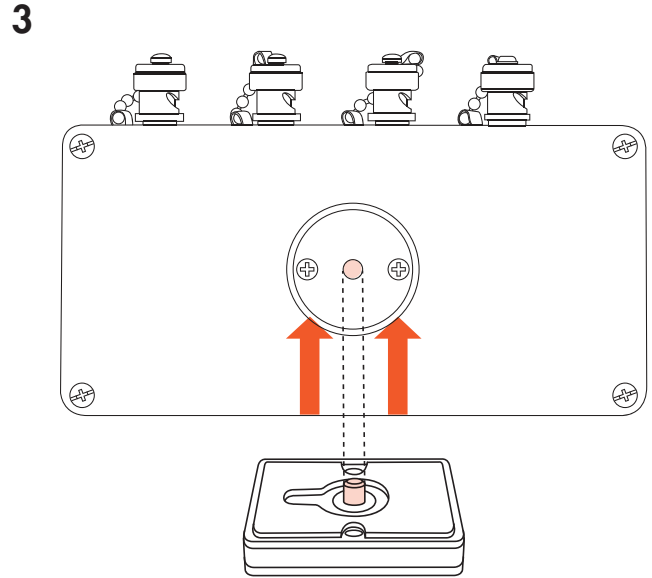

SECURE THE MOUNTING ADAPTER ON TO THE PORTABLE  
WIRELESS TRIGGER (PWT). ENSURE A TIGHT FIT.

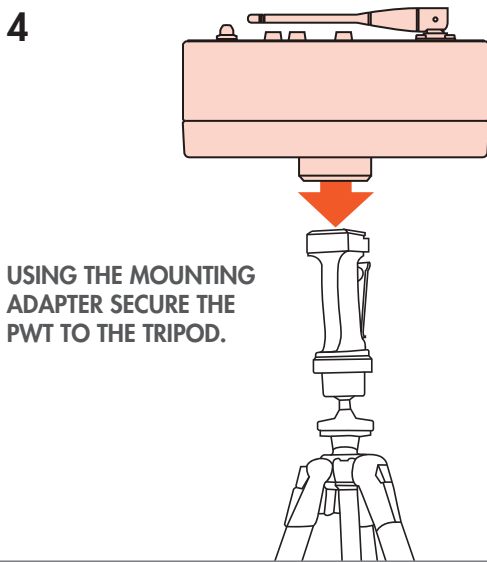


USING THE MOUNTING  
ADAPTER SECURE THE  
PWT TO THE TRIPOD.

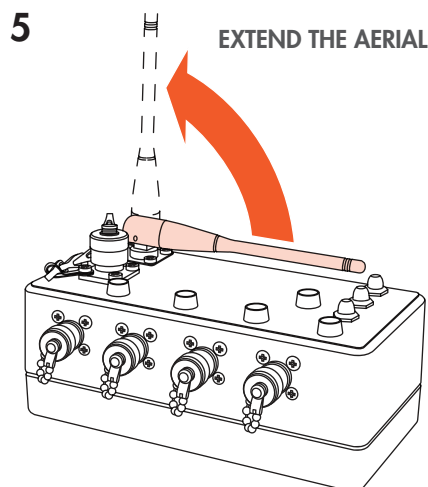


EXTEND THE AERIAL


REPEAT STEPS 1 to 5 FOR THE OTHER  
PORTABLE WIRELESS TRIGGER

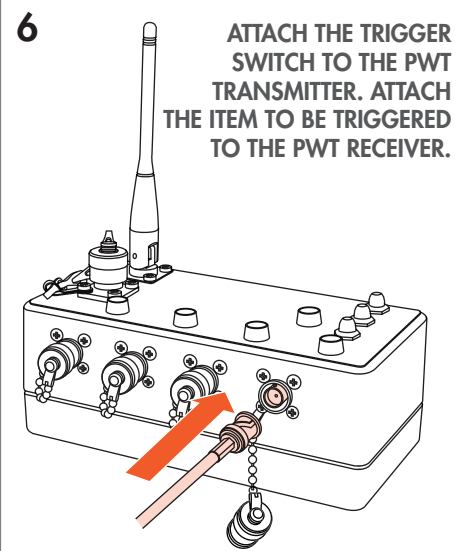


ATTACH THE TRIGGER  
SWITCH TO THE PWT  
TRANSMITTER. ATTACH  
THE ITEM TO BE TRIGGERED  
TO THE PWT RECEIVER.

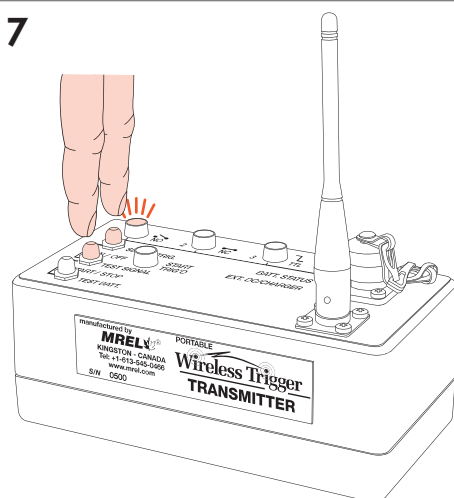

TURN ON BOTH PWTs.

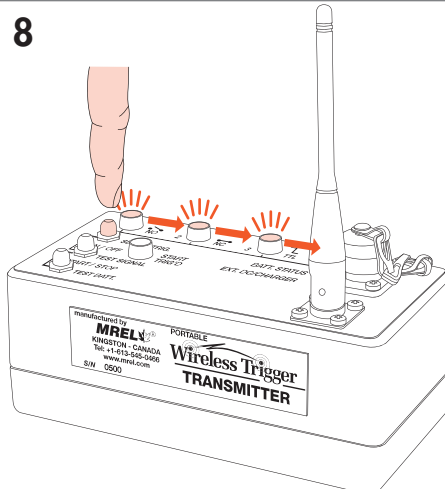

ON BOTH PWTs, PRESS THE SELECT  
TRIGGER BUTTON UNTIL ON THE  
CORRECT TRIGGER.

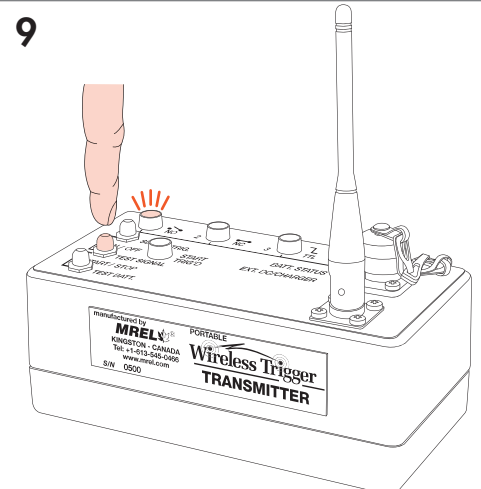

ON THE PWT TRANSMITTER, PRESS THE TEST  
SIGNAL BUTTON. AN LED SHOULD LIGHT UP  
TO INDICATE IT FOUND THE RECEIVER.

